

Type 50 Series

Instructions and EC Declaration of Conformity

ATEX Exd Head

Type 50 Series

Atex Exd Head Instructions

The apparatus must be installed and maintained by competent technicians familiar with the relevant requirements for installation of equipment in potentially explosive atmospheres e.g. EN60079-14, plus any local codes of practice.

Mechanical

Exd IIC T3-T6 (Tamb +55°C to +170°C)

 0518 Sira 00ATEXM050

 II 2 GD Sira 00ATEX1029

Label will be marked with only one T Class and corresponding Tamb rating.

Material of Construction

Cast aluminium alloy (LM6M or equivalent) or 316 stainless steel.

Cap window, if fitted, is toughened soda lime glass to BS 3463.

The O ring seal is manufactured of nitrile rubber BS 0795-30N70.

Only ATEX Exd approved cable glands for the appropriate size of cable shall be used.

If the cable gland entry is not used then an ATEX Exd approved blanking plug shall be used.

The cap must be fitted at all times and firmly screwed down onto the sealing ring.

The locking screw must be screwed into place to prevent the lid being removed.

Electrical

Internal and external M5 earth lugs as specified for use in hazardous areas are provided.

Electrical components or assemblies capable of dissipating greater than 14W must not be assembled in this enclosure.

If electrical devices are fitted then reference to the appropriate literature supplied with the device must be made.

Safety

The Type 50 ATEX Exd head has been designed in such a way as to avoid physical harm or injury, which might be caused by direct or indirect contact.

The electrical equipment encased in the housing will not increase the surface temperature by more than 30°C.


Electrical devices enclosed in these housings must have built in overload protection.

The cap must not be removed when the equipment is energised or in an explosive atmosphere.



Instructions for wiring Loop Powered Digital Display

- 1 After removing the screwed cover of the instrument connection head locate the black wire (negative) with connector attached:
- 2 Connect the loose black wire (negative) via the connector to the negative power supply.
- 3 Connect the positive power supply to the positive terminal 1 (one) of the transmitter.
- 4 After connecting the 2 wires (steps 2 & 3), replace the screwed housing cover and tighten the locking screw.

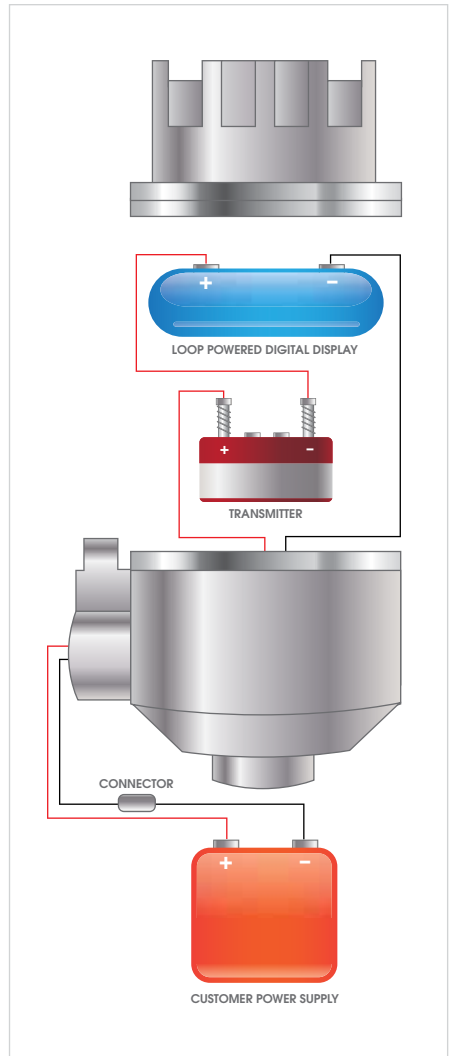

EC Declaration of Conformity

H&b Order No:

Customer Order No:

Serial Number(s):

In accordance with EC Directive 94/9/EC:

H&b Sensors Limited
Odyssey House
Durban Road
Bognor Regis
West Sussex
PO22 9RH
UNITED KINGDOM

Declare the following product:

Type 50 Series ATEX Exd Head Assembly...

has been certified by H&b Sensors Limited to the relevant EC Directive 94/9/EC, ATEX Directive Code II 2 GD.

H&b Sensors Limited have been quality assessed and certified by Sira 0518 Quality Assurance Notification Sira 00ATEXM050 and issued with EC Type Examination Certificate Sira 00ATEX1029 against the following European Standards:

EN 60079-0:2006 including corrigendum 1

EN 60079-1:2007

With reference to IEC 60079-0:2007 in respect of marking

EN 61241-0:2006

EN 61241-1:2004

To ensure the equipment meets the requirement of all the above, the product must be installed in accordance with the instructions issued.

A copy of certificate Sira 00ATEX1029 is available on request or can be downloaded from our website: www.hbsensors.co.uk

Signed for on behalf of H&b Sensors Limited:

Name:

Position:

Signature:

Date:



H&b Sensors Limited
Odyssey House
Durban Road
Bognor Regis
West Sussex
PO22 9RH
United Kingdom

Tel: +44(0)1243 866866
Email: sales@hbsensors.co.uk

www.hbsensors.co.uk

